

SteriGo Loading Procedure




1 - Lay drill on back, peel open SteriGo



2 - Put sterile gloves on. Spread SteriGo open




3 - Drape SteriGo over drill as shown

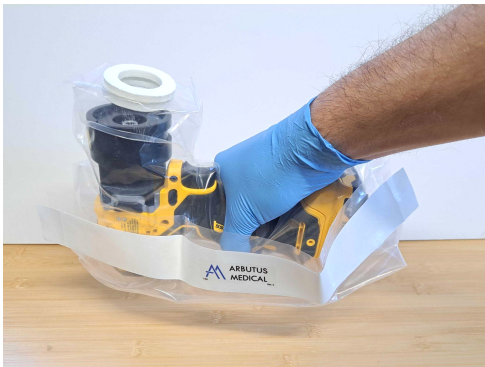

4 - Grab drill around handle



5 - Flip drill upside down and roll cuffs up

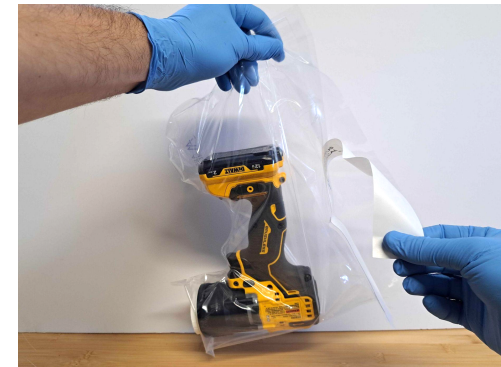

6 - Peel off paper liner from adhesive



7 - Seal bag by pinching cuffs closed



8 - Tuck excess plastic by drill handle



9 - Insert SteriTrak pin into drill until it clicks